

HUAWEI WiFi WS5200 Configuration Guide

1> Factory Reset the Router and disconnect the ethernet cable from the back


(Hold the small reset button at the back for 30s)



HUAWEI-AN18LVCC

2> Using WiFi on a Phone or Laptop, connect to your router, this should be under HUAWEI-<Device name>
The device name can be found on the back of the router .

Once you have connected you will be redirected to the setup wizard.

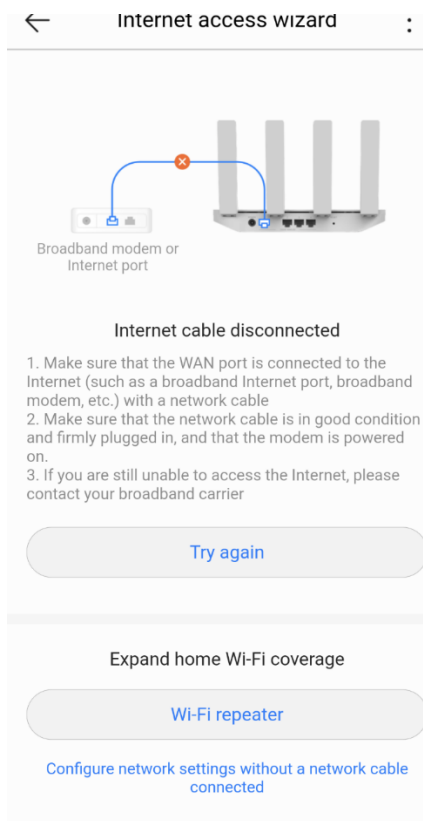

3> Select “configure network settings without a network cable”

4> Select “static ip”

Internet access wizard

Select Internet connection type

Broadband account
PPPoE

Auto-obtain IP
DHCP

Static IP

Use Wi-Fi repeater

Skip

5> Enter the network details (this can be found on your handover form)

Static IP

IP address

192.168.10.

Subnet mask

255.255.255.0

Default gateway

192.168.10.1

Primary DNS servers

8.8.8.8

Secondary DNS servers(optional)

8.8.4.4

MAC clone

No MAC clone

VLAN

Use for Internet access through a Virtual Local Area Network. Related parameters are provided by your Internet carrier.

Next

6> Enter your WiFi details this can be found on the back of the router

7> Select IPV4 mode

8> Connect the ethernet from the wall socket into the WAN port

Once the router has been setup, connect to SSID of the router to start using the internet.